

## VL-126 High Power LED Camera / Camcorder Light

## **Instruction Sheet**



## Components:

 Diffuser and filter: Without using the diffuser and filter, the VL-126 produces a spotlight effect which is suitable for shooting long distances. The diffuser will produce a soft lighting effect. The filter will change the color temperature from 5400k to 3200k. The diffuser and filter are designed to attach to the mounting slots located on the front of the light.



- 2) Directional knobs: There are two knobs on the light. These will adjust the illumination direction of the light.
- 3) Hot shoe adapter: The hot shoe adapter is used to connect the VL-126 to the camera.
- 4) Battery types: Five different types of batteries can be used to power the VL-126. They are AA NiMH, AA alkaline, Panasonic CGR-D16S Lilon, Sony Li-lon FH, FM, and F models.
- 5) Battery adapter: A battery adapter is included for the Panasonic CGR-D16S Li-Ion battery.
- 6) On / Off switch: The On / Off switch can be used to dim the light. This will allow you to adjust the brightness when shooting in different conditions.
- 7) Power indicator button: Pressing this button will let you know how much power is left in the batteries. All indicator lights will turn on when the batteries are full. No indicator lights mean the batteries need to be recharged or replaced.
- 8) Gel holder: A gel holder is included for storing the diffuser and filter.
- 9) Battery cover: Secures the batteries in the battery compartment.

## **Operation Instructions:**

 Installing the batteries: When installing AA batteries please make sure the positive and negative poles are correctly positioned according to the + and - marks shown on the battery. When installing a Li-Ion battery please place the Li-Ion battery in with the correct side in the battery holder and then press it evenly. When installing a Panasonic battery, the battery adapter must be mounted on the battery holder first. After installing a battery check the battery power indicator button then turn on the VL-126.



- 2) Mount the VL-126 onto a camera by inserting the hot shoe adapter into the hot shoe of the camera. Turn the knob to securely mount the VL-126 on the camera.
- 3) Use the On / Off switch to turn on the light. The On / Off switch will also control the light brightness.
- 4) Adjust the direction by turning the directional knobs.
- 5) Turn off the VL-126 after using it.