

## Instructions:

### Pivot Pad Mount for Sony HDR-AZ1 Mini Action Cam(s)



Funjump Rigging  
1305 N H St  
STE A114  
Lompoc, CA 93436  
678-357-5828  
sales@funjump.com



**Step 1:** Insert washers onto the three included small screws.



**Step 2:** Insert those screws into the three mounting holes.



**Step 3:** Place the camera mount into the Pivot Pad cup. Align the screws with the threaded holes.



**Step 4:** Tighten the three screws until they're all gently snugged into place. A glove mount is shown here, but our helmet mount uses the same instructions.



**Step 5:** Rotate the housing to the desired direction for camera angles.



**Step 6:** Tighten each screw up to an additional  $\frac{1}{4}$  turn maximum to make them secure.

**Step 7:**  
Remove the thumb screw.



**Step 8:** Lift one of the shock cords and slide the back end of a camera under it.



**Step 9:** Lift the other shock cord and continue sliding the camera in until it drops into place.



**Step 10:** Make sure the camera is fully seated in its socket. Some pressure may be required.



**Step 11:** You may continue to step 12, or you may repeat steps 8-10 to insert a second camera if you'd like. Either cam may be oriented forward or backward.



**Step 12:** Reinstall the thumb screw and tighten until snug.



**\*Note:** We highly recommend adding the *Sony Hard Lens Protector* for Action Cams.

## WARNING!

Funjump Rigging has made every attempt to build their products to be as safe as possible. However Funjump Rigging, their dealers, and employees cannot be held responsible for injuries, losses, or death occurring through proper or improper use of their product. At the moment of use, the user accepts full responsibility for their own well-being and property with full knowledge of the risks involved in their activities.