



GP ROLLER MOUNT

INTRO:

The GoPro Roller is available for both Hero-2 and Hero-3 models and requires the camera to be inside the transparent case to fit in.


Remember that in order to assemble you will first need to drill two holes onto your G3 helmet.

PARTS:

- 1 - base plate
- 2 - inner plate
- 3 - roller
- 4 - side clamps

STEPS:

- Using a measuring tape mark 8cm in the center of your G3 from the edge of your helmet (A).
- Next, center the base plate (1), mark the holes, remove it and drill.
- Now place your base plate (1) on the top of your G3.
- Lock it in position using the provided hardware and the inner plate (2).
- Place your GoPro onto the roller (3) and lock it in position with the internal screw.
- Once that is done put your roller (3) on the base plate (1) and place the side clamps (4).
- Insert the screws and tight them in the desired angle.
- * Your roller can also be mounted facing backwards.

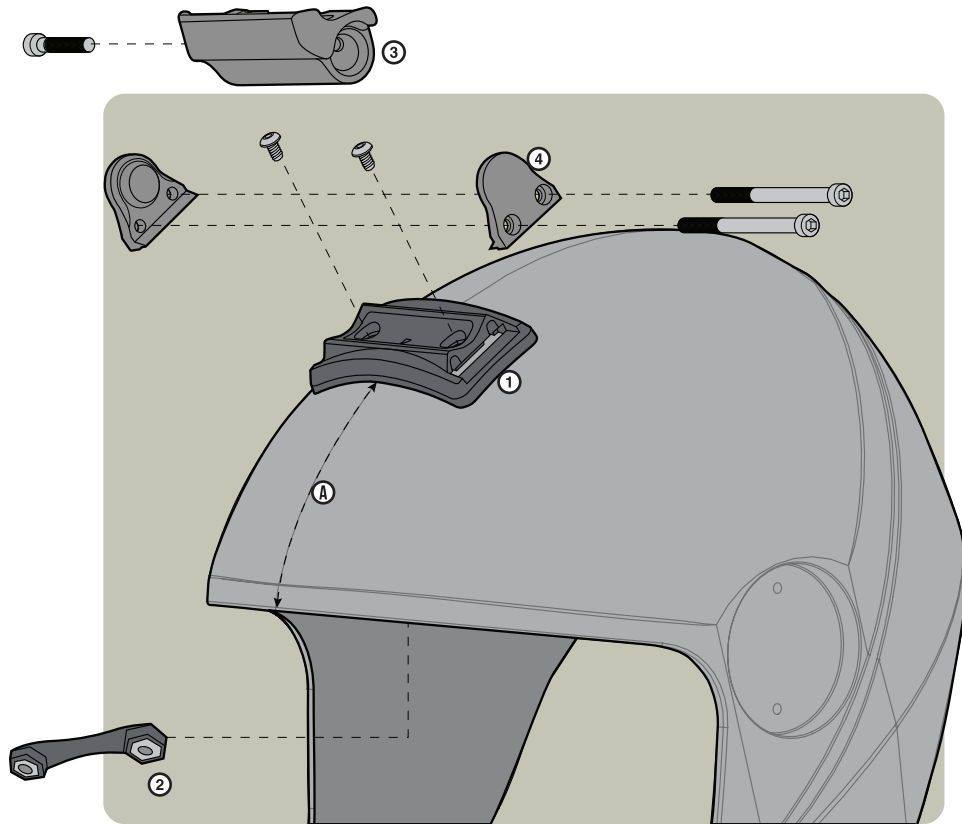

GP ROLLER MOUNT

INTRO:

The GoPro Roller is available for both Hero-2 and Hero-3 models and requires the camera to be inside the transparent case to fit in.

Remember that in order to assemble you will first need to drill two holes onto your G3 helmet.

PARTS:

- 1 - base plate
- 2 - inner plate
- 3 - roller
- 4 - side clamps

STEPS:

- Using a measuring tape mark 8cm in the center of your G3 from the edge of your helmet (A).
- Next, center the base plate (1), mark the holes, remove it and drill.
- Now place your base plate (1) on the top of your G3.
- Lock it in position using the provided hardware and the inner plate (2).
- Place your GoPro onto the roller (3) and lock it in position with the internal screw.
- Once that is done put your roller (3) on the base plate (1) and place the side clamps (4).
- Insert the screws and tight them in the desired angle.
- * Your roller can also be mounted facing backwards.

