

# Adding a Hero3 housing to a Pivot Pad glove

Remove the back cover by pushing in this tab on each side



Insert three screws into the bottom of the housing



Drop the camera housing into the receiver cup, then rotate the housing until the screws fall into their holes



Use the short hex bit to finger-tighten all three screws til snug




Rotate the housing to desired angle, then use the hex L-key to tighten another 1/8 - 1/4 turn



Insert a camera into the housing. The camera can be naked or can have backpack accessories installed



Three pieces of foam come with the camera housing

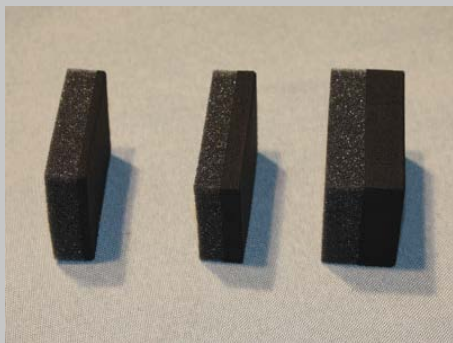

Some appropriate foam choices for different configurations



Push the selected foam fully into these guide edges



Install the back cover. Tipping it slightly forward helps it slide in



Check both side clips to make sure they're fully inserted



1305 N H St  
STE A114  
Lompoc, CA 93436  
sales@funjump.com